

SPA100 User Manual - work in progress

Table of contents

Notices	3
Copyright	3
Part Number	3
Issue	3
Location	3
Published by	3
Trademark acknowledgement	3
Notes	3
Purpose of manual	3
Safety Warnings	4
Getting Started	5
System requirements	6
Getting help	7
Introduction	8
Welcome	8
Before you Start	9
New in EPIC	10
Installation Sequence	11
Installing the Software	12
Installing the USB driver	13
Operation	14
Selecting Instrument	14
Selecting Serial COM Port	15
Connecting Instrument	16
Check for Updates	17
Earthing for function and safety	18

Notices

Copyright

© Electron Plus Design Limited 2018-2021

This manual (or part thereof) may not be reproduced by any means (electronic or photographic, including translation into a foreign language) without prior written consent and agreement from Electron Plus Design Limited as set-out in United Kingdom and international copyright laws.

Part Number

SPA100 User Manual

Issue

1.111, November 2021

Location

The latest version of this document can be found on our website: www.electron.plus

Published by

Electron Plus Design Limited
Unit 8 Manor Farm Business Centre
Manor Lane
Stutton
Suffolk
IP9 2TD
UK

Trademark acknowledgement

Electron Plus fully recognises and acknowledges any trademark(s) of the respective trademark holder. Windows™ is a trademark of Microsoft Corporation.

Notes

- We are likely to update this manual frequently as new features and improvements become available, please ensure that you check our website for an updated version of this document, especially if updating your **Electron Plus** software.
- We make every effort to ensure the accuracy of this manual's contents. If you find any errors, have suggestions for expanding on a feature, or feel that we can improve it's contents then please contact us at support@electron.plus
- Copying or reproducing this document or any part of this document without written permission of **Electron Plus** is strictly prohibited.

Purpose of manual

- The purpose of this manual is to enable you to safely setup, configure and operate your Electron Plus instrument, associated software and/or accessories. Please pay particular attention to any section with a warning symbol.

Safety Warnings

Warnings, cautions and notes are colour coded through-out this manual. These are divided into several categories and are described below:

WARNING - Pay special attention to anything written here - this is for your safety and continued protection and is critical information!

CAUTION - Damage may occur to your equipment or any DUT (device under test).

NOTE - General text, with useful information or tips.

Getting Started

System requirements

We recommend at least Windows 7 and a 64 bit machine (however, we know of Windows XP and 32 bit machines working well with EPIC).

1x USB 2.0 type A (common) for connection to the instrument, at 0.5A.

Screen resolution of at least 1440(W) x 900(H), it will work with others, but you risk some of the CONTROL RIBBON items not being visible.

EPIC uses the PC sound card for various alerts, although it will operate correctly without sound.

Technical Note

We test EPIC builds mainly on Windows 10/64 bit machines.

Getting help

Help is available by email (preferably) or via telephone.

email: support@electron.plus

from UK: **01473 327100**

international telephone: **+44 1473 327 100**

If you are experiencing an issue with EPIC, please email a copy of the following files (see below) found in the EPIC installation folder along with a description of the problem.

log.txt

bugreport.txt

This will help us understand your problem and provide a quicker fix.

Introduction

Welcome

Congratulations and thank you for purchasing an Electron Plus product.

Please take a few minutes to read the ['Before You Start'](#) section of this manual, especially as misusing this product can result in damage to it, your device-under-test or potentially place you in-danger.

Before you Start

New in EPIC

EPIC covers most Electron Plus instruments and not all instruments are updated between versions.

V1.11

Bug fixes

CTL503 - Vgs vs Id (at fixed Vds) mode

V1.10

Bug fixes

Addition of version compiled for 32 bit systems

Addition of CTL503 to EPIC

ASA200/240 - addition of SIGNAL/COMMON to EDIT page

V1.09

Bug fixes

Addition of SPA100 to EPIC

Addition of REF50X to EPIC

V1.08

Bug fixes

Installation Sequence

Please install the EPIC software and the associated USB driver software BEFORE connecting your device to a computer.

You do not need to remove a previous copy of EPIC, the new copy will overwrite the necessary existing file(s). The "settings.txt" file will only be created if it is not present.

When EPIC is first started, it will build a number of files (unless they are already there from a previous installation) in the installation directory.

If upgrading from EPIC V1.09 or earlier please be aware that the new program EXE is called either EPIC32.EXE or EPIC64.EXE and that previous shortcuts might not work or will link to previous EPIC.EXE

Installing the Software

Electron Plus products require a USB connection to a PC running EPIC (our proprietary software) in order to function.

EPIC now comes in two compiled versions (since version 21.010):

EPIC64 - for 64 bit Windows installations & PC's (we recommend this).

EPIC32 - for 32 bit legacy Windows machines.

You can download the latest copy of EPIC for free from our website (www.electron.plus/software), EPIC is being constantly revised with new features, updates and bug fixes.

1. Select which variant you wish to use go ahead and download it (typically by double-clicking on the ZIP file named something like: **Install_EPIC21010_64.ZIP**)
2. Open the downloaded file (typically Windows will recognise the ZIP format and open the file and display the contents like a folder), double click the EXE file - typically called **Install_EPIC21010_64.exe**)
3. Follow the on screen instructions to complete the installation.

Before starting EPIC, we recommend installing any USB drivers, see next section for details.

This manual MAY NOT represent the most up-to-date features and screen-shots, if something is unclear, please contact help@electron.plus and we will promptly try to assist you.

Installing the USB driver

The product covered in this document communicates with the host PC via USB using an WCH CH340 bridge IC.

A copy of the official WCH device driver is available from the SOFTWARE section of our website (www.electron.plus/software), device drivers can also be downloaded directly from WCH's website (<http://www.wch-ic.com/downloads/category/30.html>). The driver we use with Windows machines is: CH341SER and is available as .EXE or a .ZIP


Operation

Selecting Instrument

When EPIC is first installed it will initially start in ASA100 mode.

To change this:

INSTRUMENT > CHANGE INSTRUMENT and select the actual instrument you wish to use, you will then have to close and reopen EPIC for this to take effect.

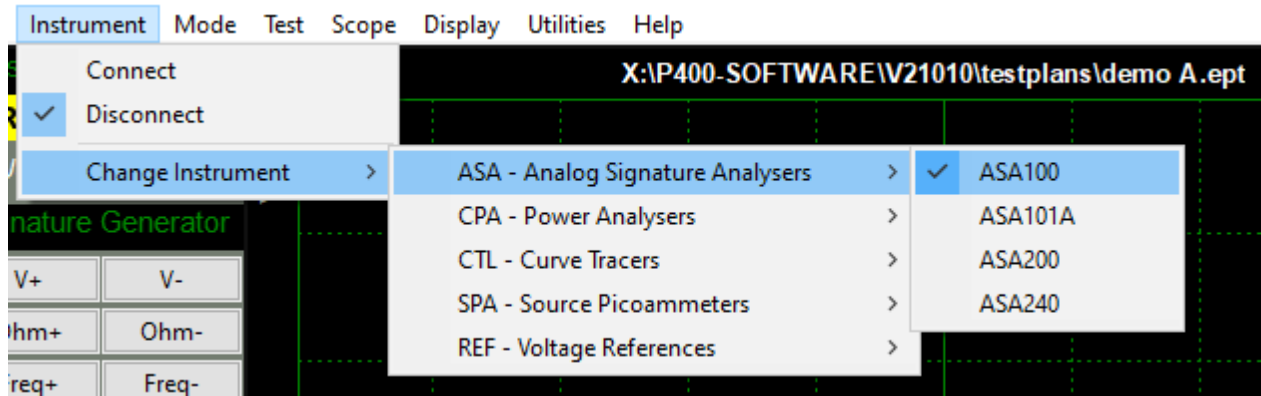


Technical Note

Variable used in settings.txt: **ActiveInstrument=ASA100**


Selecting Serial COM Port

To connect to the instrument you will need to select a COM port:

INSTRUMENT > SELECT COM PORT

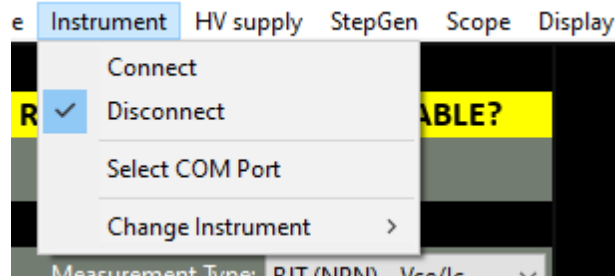

then this pop-up window will appear:

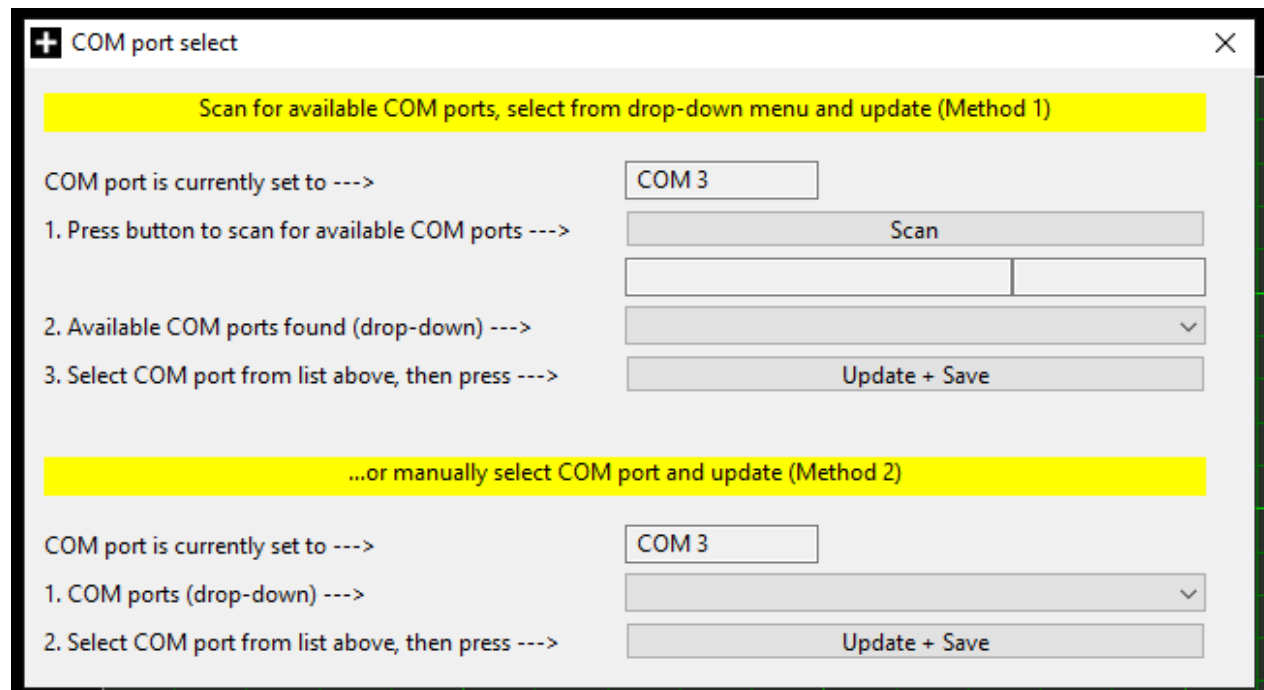

Follow the on-screen prompts in sequence (for either 'Method 1' or 'Method 2') to find and select the appropriate COM port and save your selection. When you have finished, either close the pop-up window or click the main window (the pop-up will close automatically).


Technical Note

Each Electron Plus instrument type that uses a COM serial port has its own entry in "settings.txt", e.g. CTL_ComPort=3


Connecting Instrument

To connect to the instrument you can use the options in the MENU or the button on the CONTROL RIBBON.

INSTRUMENT > CONNECT to connect, or **DISCONNECT** to disconnect.

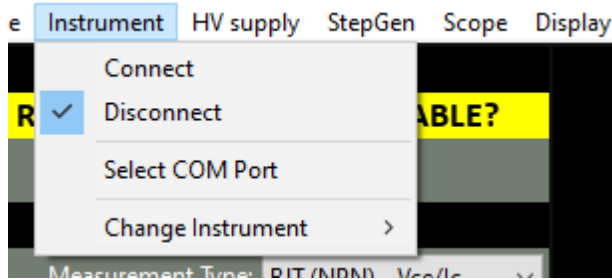

or

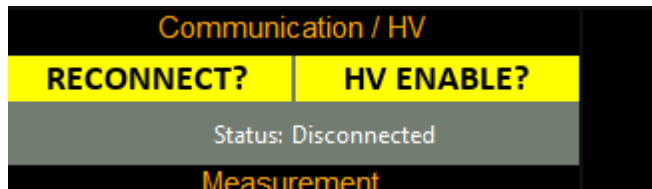

An error message will be displayed if EPIC cannot open a serial port to the instrument - this can be caused by the following:

1. Not having the serial port driver installed or
2. Wrong (or no) serial port COM number being selected or
3. No instrument attached or powered on.


Ensure the correct driver is installed, the correct COM port is selected ([Selecting Serial COM Port](#) section).

Check for Updates

Once per day EPIC will check if there is a newer version available. This feature may be disabled or re-enabled here:

UTILITIES > DAILY UPDATE CHECK

Tick will enable EPIC to perform the daily update check, unticking will prevent EPIC from performing the daily update check.

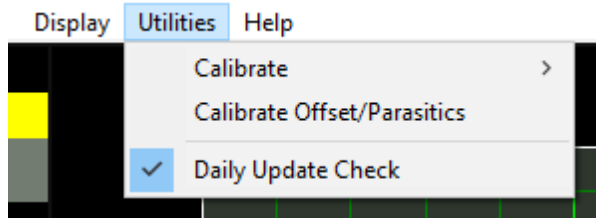

Technical Note

In "settings.txt": **CheckWebsiteForUpdate=1** or **0** determines if this function is enabled/disabled. **DateOfLastUpdateCheck=04/11/2021** is self-explanatory.

If function is enabled and date \neq today a small file called "version.txt" is downloaded from "<http://www.electron.plus/wp-content/>". This contains the current revision of EPIC also the current revision for each product where a change/update has been made.

Earthing for function and safety

For functional and/or safety reasons you may wish to EARTH the casing of your Electron Plus instrument. This is not necessary under most normal operating conditions.

In this case, we recommend loosening (and re-tightening) the M3 stainless steel chassis screw (2mm HEX drive) and fitting an earthing wire using either ring terminal or spade terminal.

If in doubt please contact Electron Plus for further details.

Note

USB 0V, rear panel, front panel, casing and any external power supply are all the same potential and connected via low impedances. Avoid creating 'ground loops' with your setup.